


CP935W Quick Start

Package Contents


If you purchase CPW935 of DECT version, the package also include W70B. For the quick start guide of W70B, see [Quick Start for W70B](...\01. Quick Start for W70B.md).



 
CP935W

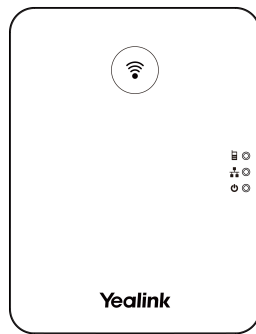

W70B Base Station

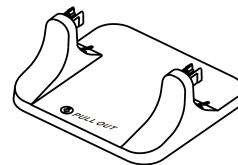 

Base Stand

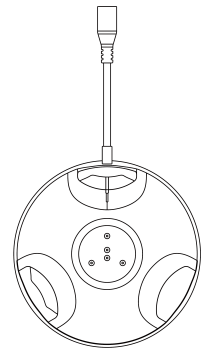 

Charging Cradle



2 Power Adapters



Quick Start Guide

 


Ethernet Cable

TIP


One power adapter (5V/0.6A) is for W70B base station, the other one (12V/1.25A) is for CP935W.

Charge CP935W

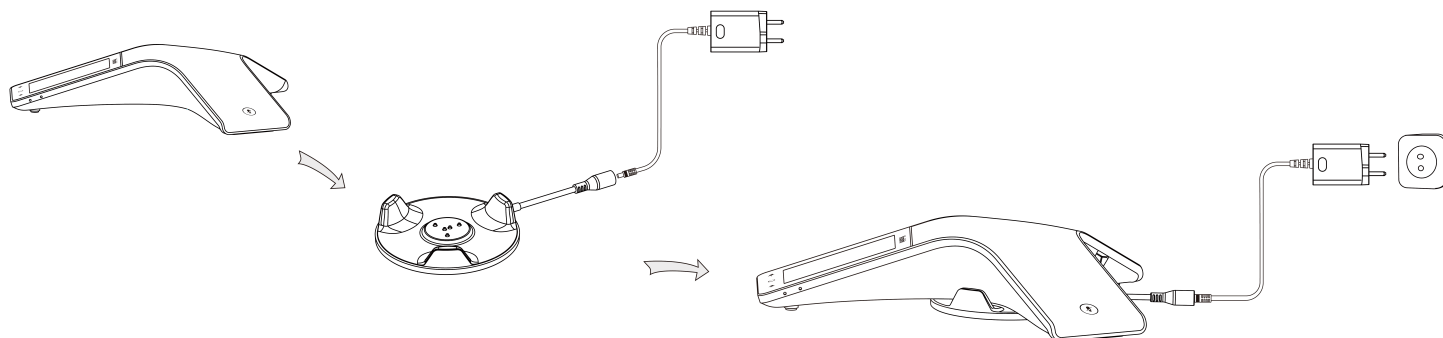**TIP**

- Use Yealink-supplied power adapter (12 V/1.25 A). A third-party power adapter may damage the wireless conference phone.
- Check the charging status in the upper-left corner of the LCD screen.

 Hardware Introduction

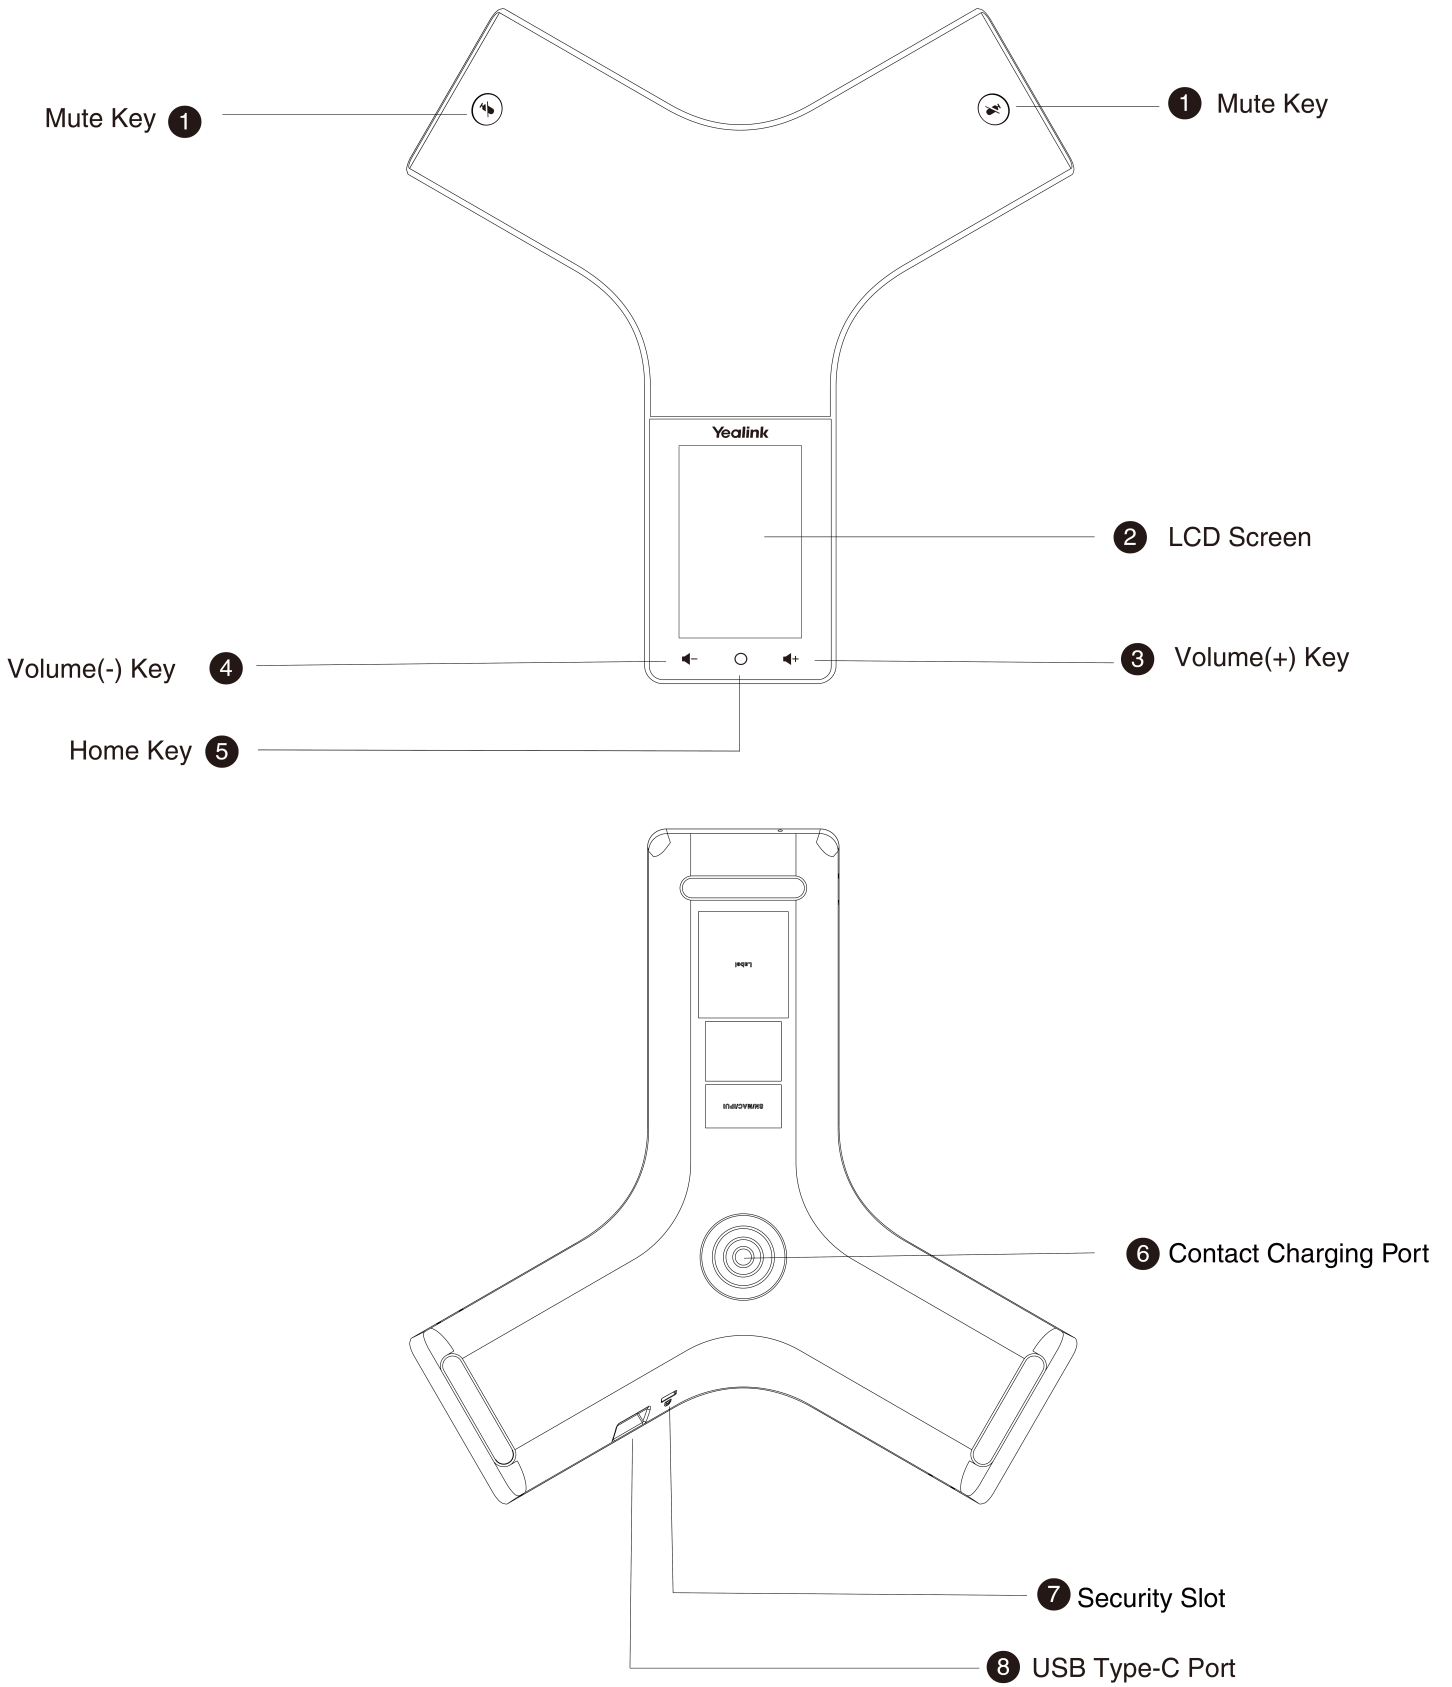

No.	Item	Description
1	Mute Key	<ul style="list-style-type: none"> • Toggle mute feature. • Indicate phone and call status.
2	Speaker	Provide speakerphone audio output.
3	LCD Screen	Show information about calls, messages, Bluetooth, time, date and other relevant data.
4	Volume Key(+)	Increase the volume of the speaker, ringer, or media.
5	Volume Key(-)	Decrease the volume of the speaker, ringer, or media.
6	Home Button	Long press to power on/off or return to the home page with one-touch.
7	Six Internal Microphones	Provide 20-feet (6 meters) and 360-degree sound pickup.
8	Contact Charging Port	Put the port to the charging cradle to charge.
9	Security Slot	Allow you to connect a universal security cable to your phone so you can lock down your phone. The phone will not be removed after locked.
10	USB Type-C Port	Allow you to connect a PC and turn your phone into an external speaker and microphone for your PC.

Power On/Off

Power on: Press the home key for 3 seconds or charge the CP935W.

Power off: Press the home key for 10 seconds then tap OK or tap **More > Basic > Power Off > OK** on the LCD screen of the CP935W.

Mute Touch Key LED Indicators

LED Status	Description
Solid red	<ul style="list-style-type: none">• The phone is initializing.• The phone is muted.
Flashing red	The phone is ringing.
Solid green	<ul style="list-style-type: none">• The phone is placing a call.• There is an active call on the phone.• The call is placed on hold or is held.
Flashing orange	The phone prompts low battery or is charging.
Off	<ul style="list-style-type: none">• The phone is powered off.• The phone is idle.

Idle Screen and Icons Introduction














The user screens and icon indicators can help you navigate and understand the important information on the phone's status.

The idle screen is made up of the signal strength, battery status, status bar, handset name, and soft keys. The time & date is displayed in the middle of the screen.



Items	Introductions
Signal Strength	<ul style="list-style-type: none"> • Weak to strong: • No reception: • Eco mode+ is on:
Battery Status	<ul style="list-style-type: none"> • Low to full: • Need Charging:
Status Bar	Displays the feature status icons. The status icons are displayed when features are activated.
Default Account	Indicates the local name or number.
Handset Name	Displays internal handset number and registered handset name (for example, “1” is internal handset number, indicating the handset is the Handset 1 of the base station).
Soft Keys	The soft key labels on the screen directly above the soft keys show the functions available at that particular moment.

Icon introduction

Icon	Description	Icon	Description
	The ringer volume is 0 and the phone is in the silent mode.		The phone has enabled the Do Not Disturb (DND) feature.
	The phone has enabled the Always Forward feature.		The phone has missed calls.
	The phone has enabled the Busy Forward feature.		The phone has enabled the Auto Answer feature.
	The phone has enabled the No Answer Forward feature.		The microphone has been muted.
	The phone has registered to a base station successfully.		The phone failed to register to a base station.
	The phone has enabled the Bluetooth feature.		The phone has new voice mails.
	The Bluetooth-enabled mobile phone is paired and connected to the phone.		

How to Register Handset to Base

See [Register Devices to W70B](#) or [Register Devices to W80DM and W90DM](#) for more detailed information.

How to Place and Answer Calls

See [Place Calls](#) for detailed information.

See [Answer Calls](#) for detailed information.

How to Update Firmware

See [Update Handset](#) for detailed information.

