




# UH36 Mono & UH36 Dual Wired Headset Quick Start Guide



English / 简体中文

# **Package List**

### **UH36 Mono**

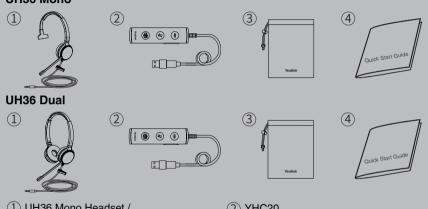

- UH36 Mono Headset / **UH36 Dual Headset**
- **Drawstring Bag**

- YHC20
  - **Quick Start Guide**


We recommend that you use the included accessories, and other accessories may have compatibility issues that prevent them from working properly.

### **How to Connect**


Connect to PC/Yealink IP phone (with YHC20)




Connect to the smartphone or tablet (without YHC20)

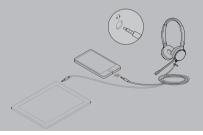

# **Headset Wear and Adjustment**

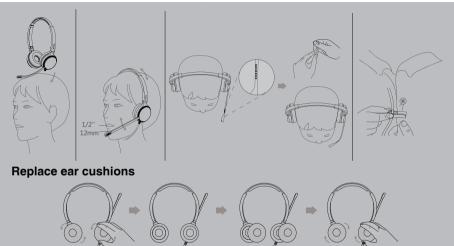

### How to Use

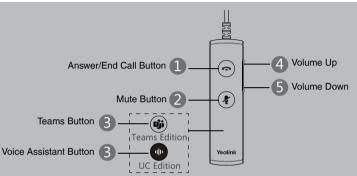


- $\bigcirc$  Press to answer, reject, or end a call.
- (2) Press to mute or unmute microphone.
- (3) (Teams Edition) Press to invoke the Teams client; Hold 2 seconds to activate Cortana integrated in Teams (this requires Microsoft's support). (UC Edition) Hold 2 seconds to activate voice assistant.
- (4)(5) Press to turn up/down volume.

Before using the Teams button functions, you should install the Microsoft Teams client on your PC, smartphone or tablet.

# 包装清单

### **UH36 Mono**

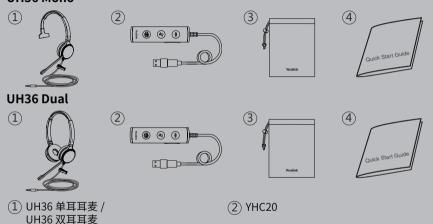

快速入门指南

③ 東口袋


<sup>♡</sup> 我们推荐使用自带的配件,使用其它配件可能存在兼容问题导致无法正常使用。

## 连接


连接到 PC/ 亿联 IP 话机(通过 YHC20)




连接到手机或平板(不通过 YHC20)

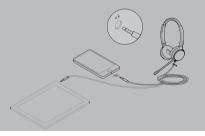

# 耳麦佩戴和调节

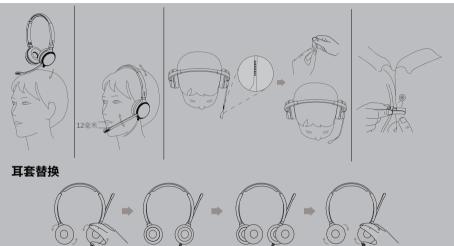

# 使用

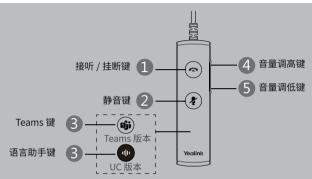

- ① 接听 / 拒接来电,或挂断电话。
- (2) 麦克风静音或取消静音。
- ③ (Teams 版本) 按下按键调出 Teams 客户端; 长按 2 秒激活集成在 Teams 的 Cortana (需要微软支持)。 (UC 版本) 长按 2 秒唤醒语言助手。
- 4 5 按下按键调高或调低音量。
  - $\overset{f igcep}{f igcep}$  在使用 Teams 按键功能之前,需要先在 PC/ 手机 / 平板上安装 Microsoft Teams 客户端。

#### Regulatory Notices

#### Operating Ambient Temperatures

- Operating temperature: +14 to 122°F (-10 to 50°C).
- Relative humidity: 5% to 90%, noncondensing. Storage temperature: -22 to +160°F (-30 to +70°C).

#### Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product, or for any claim from a third party. We are not liable for problems with Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc. arising from the use of this product.

#### Explanation of the symbols

- DC symbol
- is the DC voltage symbol.
- · WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic

equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

#### Restriction of Hazardous Substances Directive (RoHS)

This device complies with the requirements of the FLI BoHS Directive. Statements of compliance can be obtained by contacting support@vealink.com.

#### Safety Instructions

Save these instructions. Read these safety instructions before use!

#### ⚠ General Requirements

- . Before you install and use the device, read the safety instructions carefully and observe the situation during operation
- During the process of storage, transportation, and operation, please always keep the device dry
- and clean, avoid collision and crash Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center for repair
- Please refer to the relevant laws and statutes while using the device. Legal rights of others should he respected as well

#### ↑ Environmental Requirements

- Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- . Keep the device dry and free of dusts.
- . Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made
- . Keep the device away from any heat source or bare fire, such as a candle or an electric heater.

#### ⚠ Operating Requirements

- . Do not let a child operate the device without guidance
- . Do not let a child play with the device or any accessory in case of accidental swallowing
- . Please use the accessories provided or authorized by the manufacturer only \*The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided
- sume protection power socket only Refore plugging or upplugging any cable, make sure that your bands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water for example near a bathful washhowle
- kitchen sink, wet basement or near a swimming pool. \*During a thurderstorm stop using the device and disconnect it from the power supply Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike.
- . If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.

- . When there is smoke emitted from the device or some abnormal poise or smell disconnect the device from the nower supply, and unplug the power plug immediately.
- . Contact the specified maintenance center for repair. Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- . Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables

#### ↑ Cleaning Requirements

- . Before cleaning the device, disconnect it from the nower supply . Use a piece of soft, dry and anti-static cloth to clean the device.
- . Keen the power plug clean and dry

#### Troubleshooting

- The unit cannot supply power to Yealink device
- There is a bad connection with the plug. 1. Clean the plug with a dry cloth.
- 2. Connect it to another wall outlet.
- The usage environment is out of operating temperature range 1. Use in the operating temperature range
- The cable between the unit and the Yealink device is connected incorrectly.
- 1 Connect the cable correctly
- You cannot connect the cable properly.
- You may have connected a wrong Yealink device. Use the correct power supply.
- Some dust, etc., may be in the port.
- Clean the port.
- Contact your dealer or authorized service facility for any further questions.

#### **FCC Statement**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accent any interference received including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### IC Statement This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following

- two conditions:
- (1) this device may not cause interference; and (2) this device must accent any interference including interference that may cause undesired operation of
- the device, CAN ICES-3(B) Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts
  - de licence. L'exploitation est autorisée aux deux conditions suivantes :
  - (1) l'appareil ne doit pas produire de brouillage:
  - (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement NMR-3/R)


#### Contact Information

- VEALINK NETWORK TECHNOLOGY CO. LTD.
- 309, 3rd Floor, No.16, Yun Ding North Road, Huli District, Xiamen City, Fuilan, P.R.C.
- YEALINK (FUROPE) NETWORK TECHNOLOGY B.V. Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam, The Netherlands
- YEALINK (USA) NETWORK TECHNOLOGY CO. LTD.
- 999 Peachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA
- Made in China

### Software

#### Yealink USB Connect

Yealink provides a USB device manager client - Yealink USB Connect, which you can use to personalize and manage your Yealink headsets.

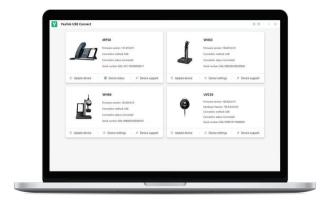

Download it from the Yealink website https://www.yealink.com/product/yuc.

If your headset needs warranty service, the process is quick and easy. Please go to https://ticket.yealink.com/page/headset/warranty-service.html and submit RMA Claim to Yealink.

### Need more help?



Yealink Documentation

#### Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD. Web: www.yealink.com Copyright@2022 YEALINK(XIAMEN) NETWORK

TECHNOLOGY CO.,LTD. All rights reserved.